
## Double Adjustable Shaft

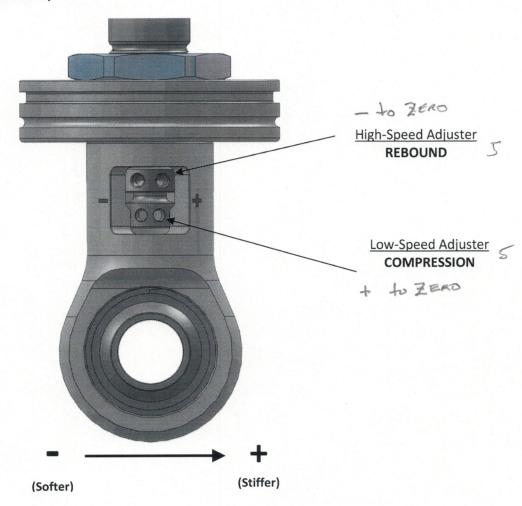

#### Adjuster Operation (Corvette Rear)



## High-Speed Adjuster (12 Sweeps)

The high-speed adjuster is a "sweep" style adjuster meaning that its adjustment is measured by the location of the adjuster in the eyelet window. It uses a left-hand thread in its operation which means; as you increase high-speed, the adjuster will move down in the window\*. The high-speed adjuster's reference position is **full soft** and referred to as +0 (+0 = full soft, +12 = full stiff).

### Low-Speed Adjuster (30 Clicks)


The low-speed adjuster is a "clicker" style adjuster meaning that its adjustment is measured by detent grooves located inside the high-speed shaft. It uses a right-hand thread in its operation which means; as you increase low-speed, the adjuster will move up in the window. The low-speed adjuster's reference position is **full stiff** and referred to -0 (-0 = full stiff, -30 = full soft).

<sup>\*</sup>The low-speed adjustment does not change when adjusting the high-speed.

# Double Adjustable Shaft



### **Adjuster Operation (Corvette Front)**

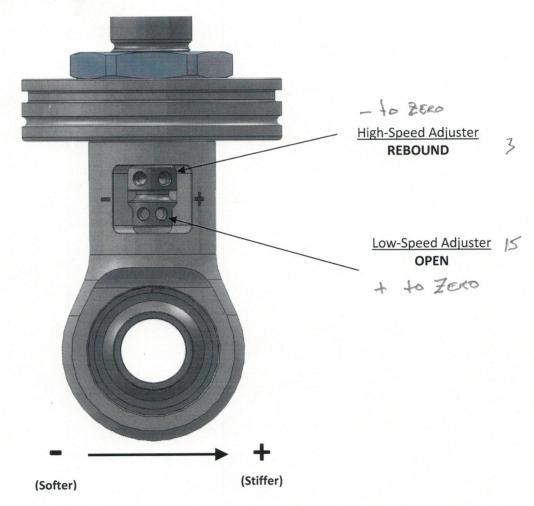

## High-Speed Adjuster (12 Sweeps)

The high-speed adjuster is a "sweep" style adjuster meaning that its adjustment is measured by the location of the adjuster in the eyelet window. It uses a left-hand thread in its operation which means; as you increase high-speed, the adjuster will move down in the window\*. The high-speed adjuster's reference position is **full soft** and referred to as +0 (+0 = full soft, +12 = full stiff).

### Low-Speed Adjuster (30 Clicks)

The low-speed adjuster is a "clicker" style adjuster meaning that its adjustment is measured by detent grooves located inside the high-speed shaft. It uses a right-hand thread in its operation which means; as you increase low-speed, the adjuster will move up in the window. The low-speed adjuster's reference position is **full stiff** and referred to -0 (-0 = full stiff, -30 = full soft).

<sup>\*</sup>The low-speed adjustment does not change when adjusting the high-speed.