


1997-2013 Corvette Delrin Bushings

Front Lower

Left hand shown

*You may have to clearance the control arm width if the casting is too wide for the aluminum pin and delrin. Max air gap = .010"

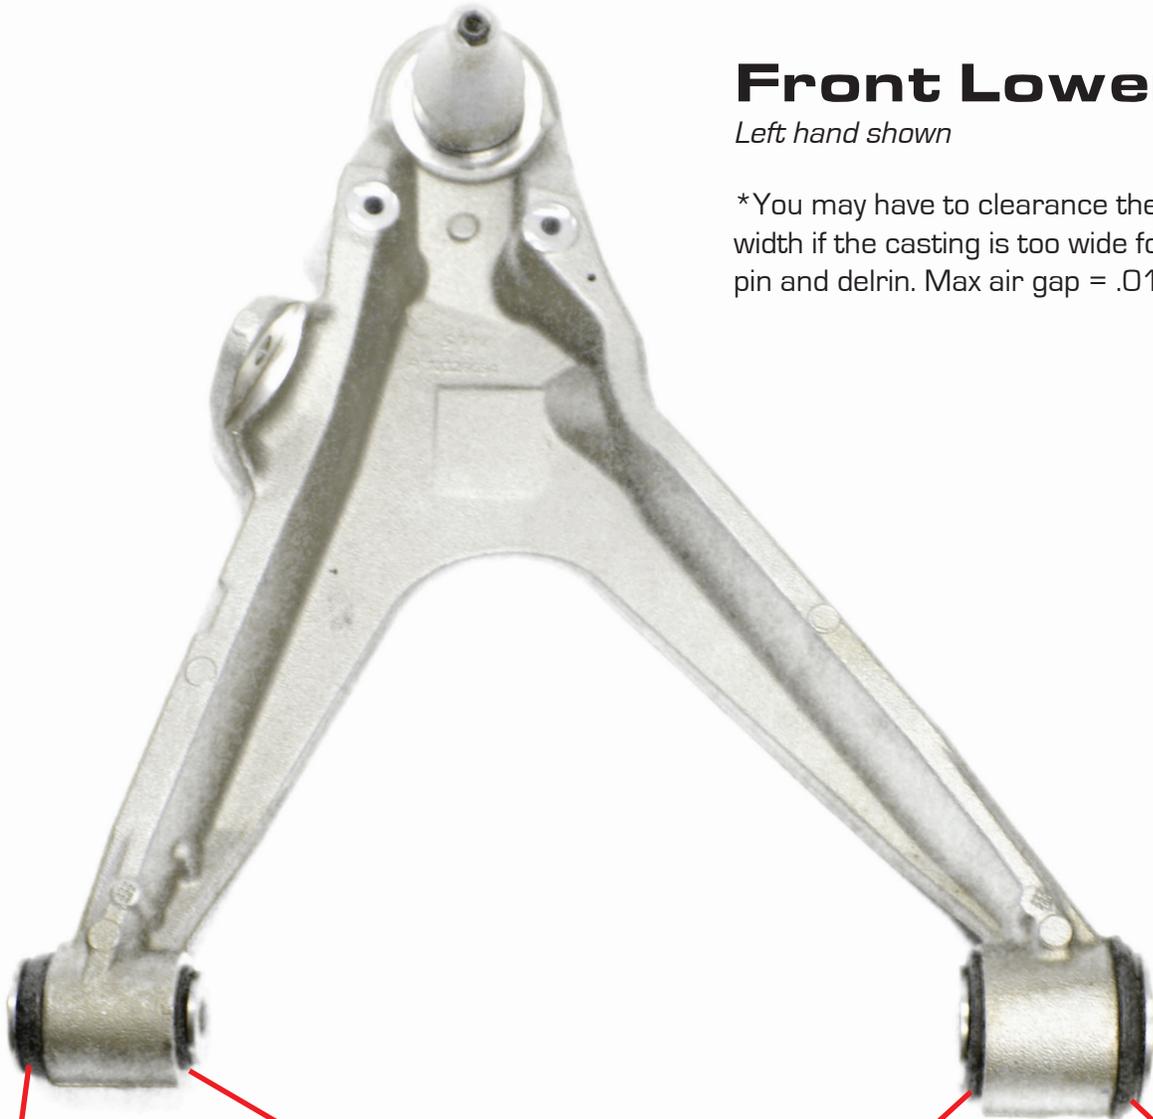

3

Thick bushing to the outside of arm

2

Thin bushing to the outside of arm

4

Thin bushing to the outside of arm

5


Thick bushing to the outside of arm



2008-2013 Corvette Delrin Bushings

Rear Upper

Aluminum Frame

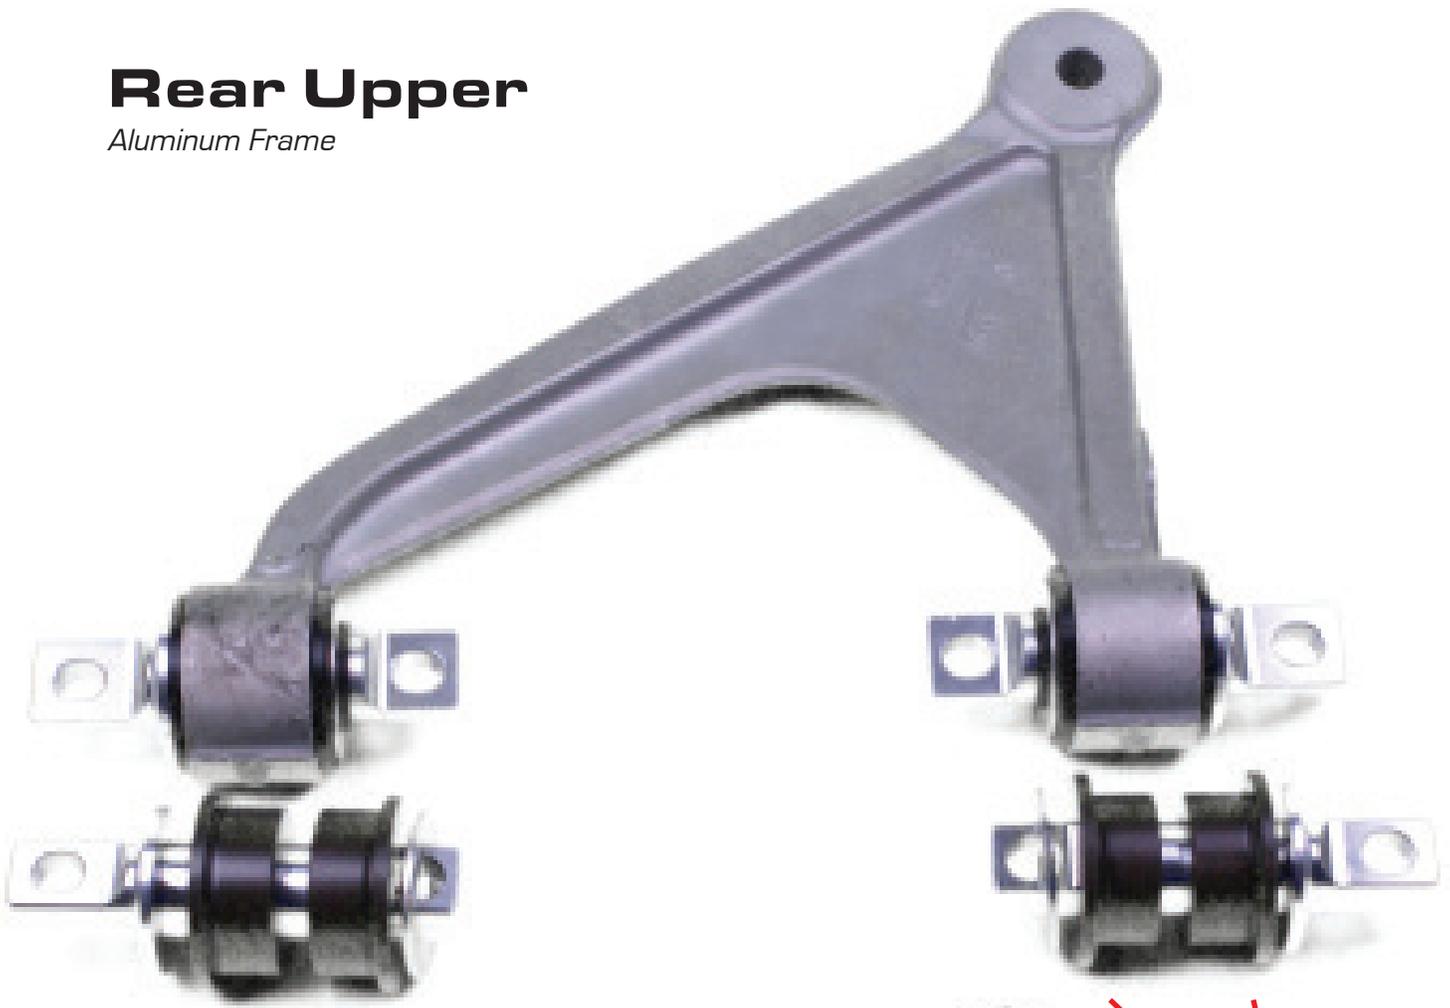

6
Two snap rings for
the inner retainer




7
Two snap rings for
the inner retainer

2014-2019 Corvette Delrin Bushings

Rear Lower

Left hand shown

*You may have to clearance the control arm width if the casting is too wide for the aluminum pin and delrin.
Max air gap = .010"

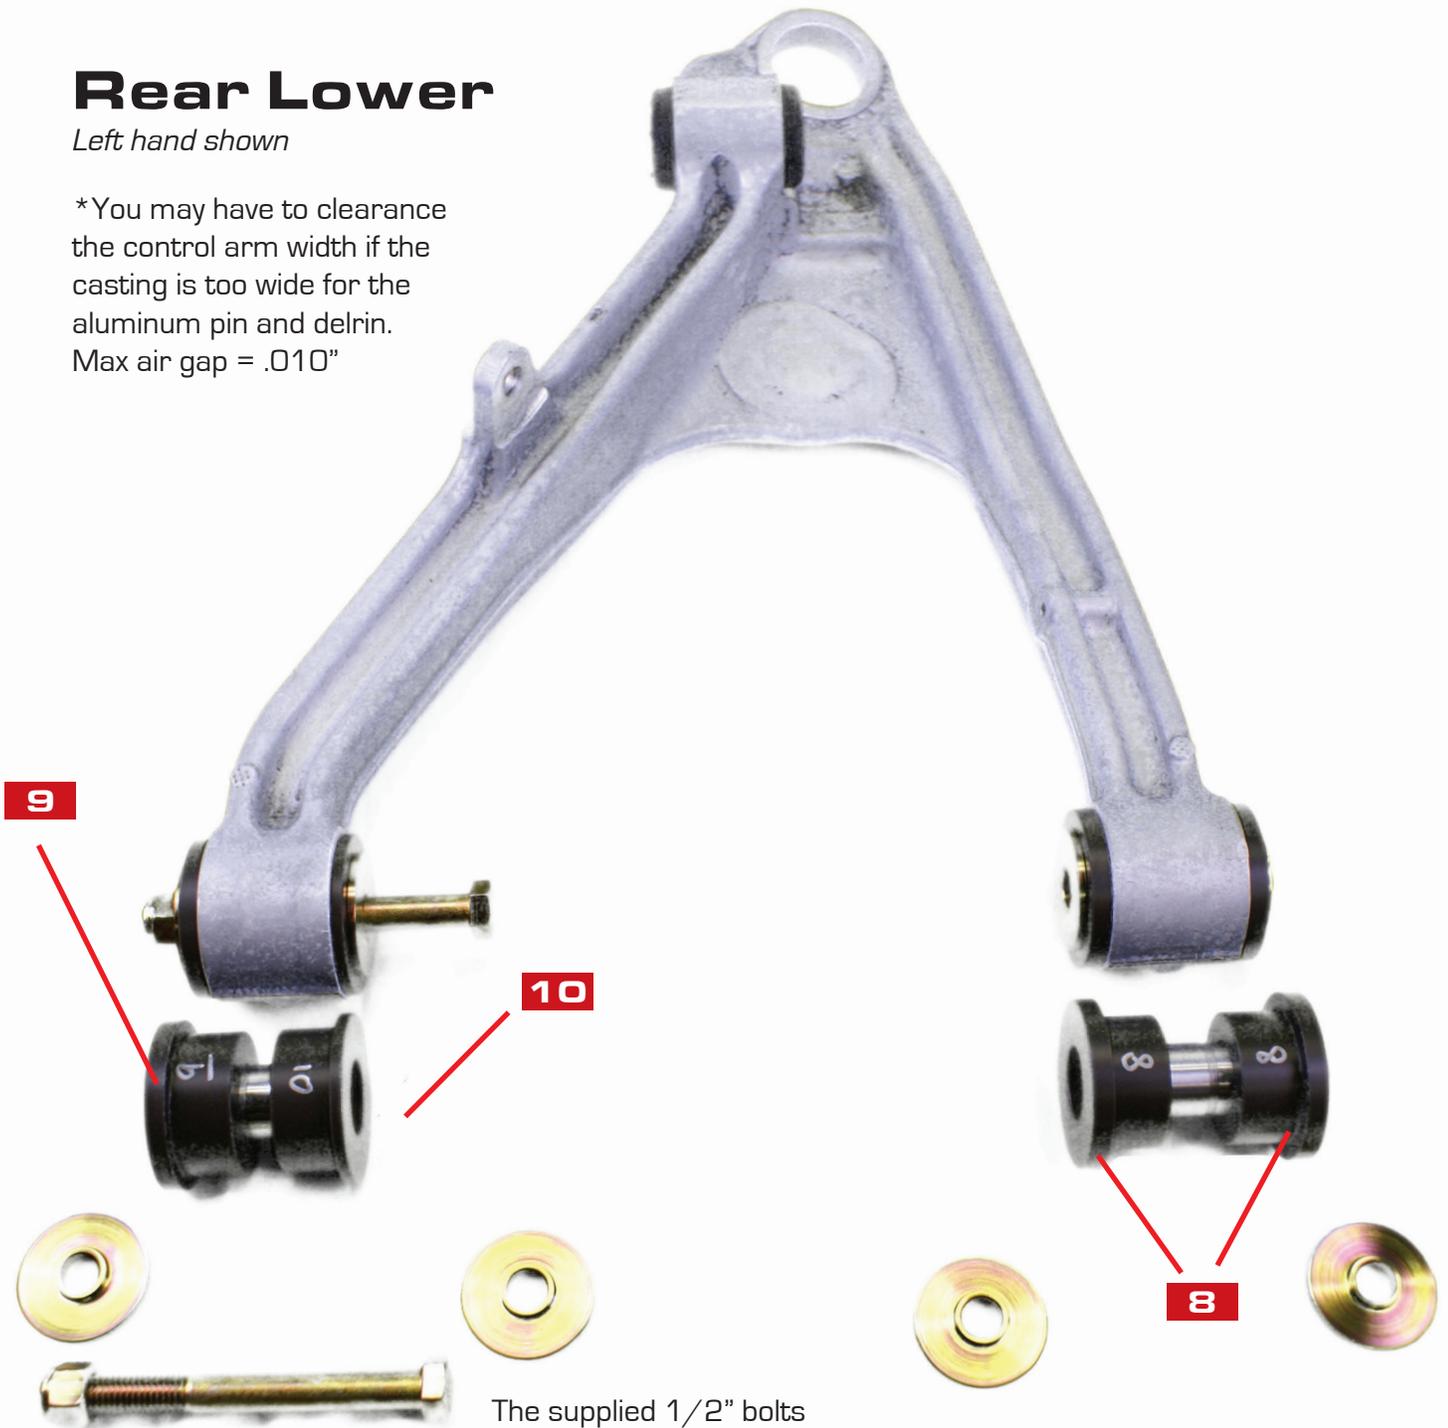

The supplied 1/2" bolts will pass through bushings marked #9 & 10.