



Kurtco Delrin Bushing Installation

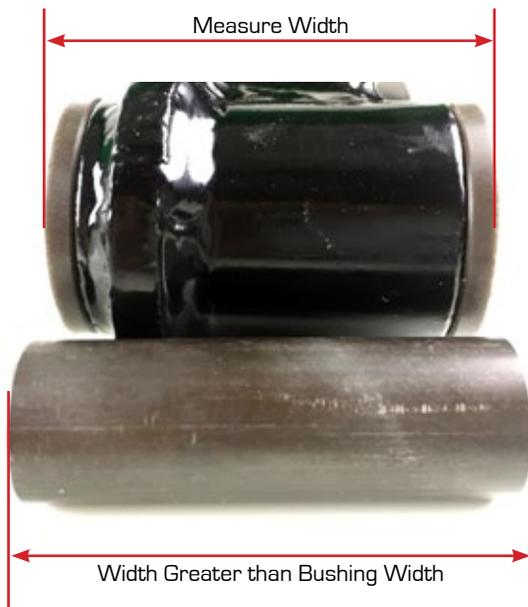

1. Lubricate your delrin sleeves with provided synthetic grease.
2. Push in bushings into T-arm.
3. Measure with an electronic caliper, the total width of the bushings installed.
4. Measure the total width of the new sleeve. Your sleeve measurement needs to be **.010-.015 LONGER** than the bushing measurement.
5. Carefully and evenly shave one side of the outer bushing if needed to have the total bushing measurement equal less than the sleeve measurement.
6. Press in sleeve and check for play. There should not be any play in the sleeve.

The bushings have an hourglass shape on the inner-diameter to allow for the articulation of the trailing arm. There should be a slight air gap around the sleeve once installed.

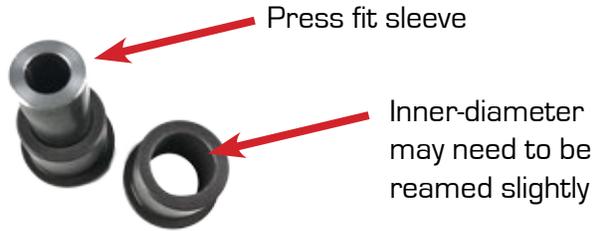